Fern Willow Lily

Magical Pixie Houses
Sold separately

You can collect them all!

You control the magic!
Of Dragons, Fairies & Wizards™

Fairy Wand

The power is in your hands! Enter the world of Dragons, Fairies, and Wizards, a world of friendship, magic, and adventure.
Each Fairy Princess will help you cast fantastical spells, go on adventures, and meet mythical creatures such as unicorns and pixies!
There are over 700,000 unique interactions! Your Fairy will also teach you her special spells, that only she knows! What adventures will your wand help you discover?

Fairy Princess

Fern

Fern is so sweet
with her pink dress
and hair. She's smart
and courageous, with
wisdom to share!
Lighthearted and helpful
in so many things.
Her words so uplifting
bring warmth to your wings!

Fern's unique spells are
Love, Lemonade & Butterfly.

Fairy Princess

Willow

Willow is bubbly and lighter than air! Wherever she goes bubbles follow her there! She's silly and dizzy and tells a good joke to each of her friends and to all fairy folk!

Willow's unique spells are Frost, Glitter & Shooting Star.

Fairy Princess

Lily

Lily is spunky, quick-witted and strong! She's up for adventure and she wants you along! No challenge too risky, no mission too hot, It's really amazing the courage she's got!

Lily's unique spells are Popcorn, Hippo & Fireworks.

How to create your magic

Swish is
(side motion)

Flick is (down motion)

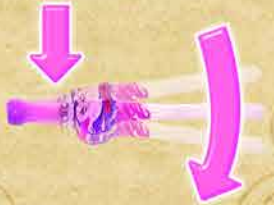

www.Fairy-Wand.com

Check us out on...

You Tube

Getting Started

Magic Spells

Wishing spell

Firefly spell

Bubble spell

Candy spell

Lightning Bolt spell

Girl Power spell

Rainbow spell

Fairy Jump spell

Confetti spell

Music spell

Dance spell

Fern's
Special Spells

Love spell

Lemonade spell

Butterfly spell

Willow's
Special Spells

Frost spell

Glitter spell

Shooting Star spell

Lily's Special Spells

Popcorn spell

Hippo spell

Fireworks spell

Secret hidden spells

Pigs fly spell

Gnome spell

- Never hit people or animals with wand!
- Never hit wand on any hard surface!
- Avoid rough use such as knocking the product or swinging it around.
- If LCD screen happens to break please discard toy at once.
- Do not give this item to children under the recommended age.
- This product contains small parts that may cause suffocation if swallowed.
- While charging batteries, please ask a guardian for help.
- Recommended for Ages 4 & up.

Warning: CHOKING HAZARD - Small parts. Not for Children under 3 years.

Dance Mode

The fairy will ask you to dance. Flick once for YES. Now sing or play music. The fairy will dance to the sound for about one minute.

Activation

The Wand has a [DEMO / ON / OFF] slide switch on the back of the toy. Move the switch to "ON" to activate the Fairy Wand.

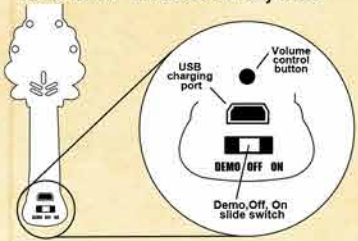

USB Charging Port

The toy includes a USB cord. Insert the USB cord to charge the Fairy Wand before use.

Volume control button

To change the volume on your wand, Press the small button. Each press will lower the volume on step. The 4th press will restore the volume to 100% volume

Reset

If the Fairy Wand locks or freezes up, simply turn it off and back on again to reset.

Charging instructions:

When wand is turned to "off" position, plugging in USB cable to power supply will display a "battery charging" icon. If battery needs charging, this icon will be RED. When battery fully charges, the icon will be GREEN.

Charge time: Approximately 2.5 hours to fully charge.

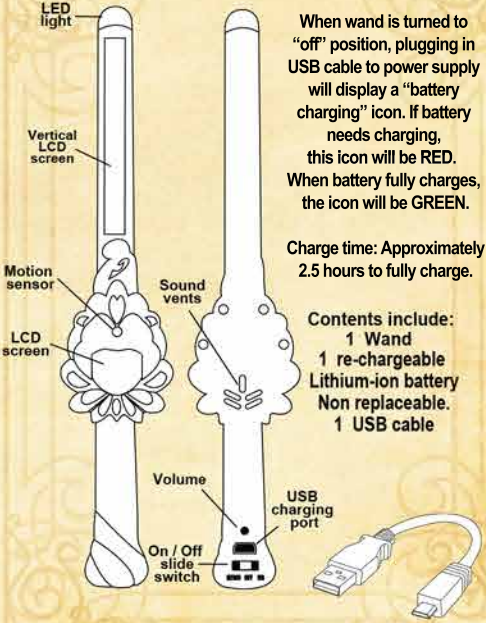

Contents include:
1 Wand
1 re-chargeable Lithium-ion battery Non replaceable.
1 USB cable

- **Please retain these instructions as they contain important information.**
- Read all of the instructions before operating toy
- Toy may come in many different styles and may differ from the ones shown on this instruction sheet.
- Remove all contents from package and discard any rubber bands, wire ties or other packaging materials that are not part of the product.

Important information concerning Lithium-ion rechargeable batteries. Lithium-ion rechargeable batteries are significantly more sensitive than traditional alkali- or NiMH-rechargeable batteries, therefore the instructions and warnings must be observed. Always dispose of Lithium-ion rechargeable batteries properly.

Guidelines and warnings for the use of Lithium-ion rechargeable batteries

- Recharge the 3.7 V 800 mAh battery in a safe place and at a safe distance to flammable material.
- Never leave the battery unattended while it is charging
- Aways use the Lithium-ion charging unit (USB cable) included with this product.
- In case of non-compliance with these directions there is a danger of fire resulting in a health risk and/or damage to property. Never use any other battery charger.
- Should the rechargeable battery swell, deform or expel excessive heat while discharging or recharging. immediately stop charging or discharging the battery. Place the wand in a safe and open area away from any flammable material and watch it for at least 15 minutes. Discontinue use.

Claim: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For questions and comments please call in the U.S.A. and Canada 1 800 225 9319

WARNING!
All rubber bands and wire ties, as well as tags, are not parts of this toy and should be discarded for your child's safety. Colors and contents may vary from those shown on the package.

Printed in China R1 062717 WG90000

©2017 Cepia LLC St. Louis Missouri 63124 USA Made in China

BC

0-3

Complies with Toy Safety Standard ASTM F963

Please Recycle